



TECHNICAL DRAWING

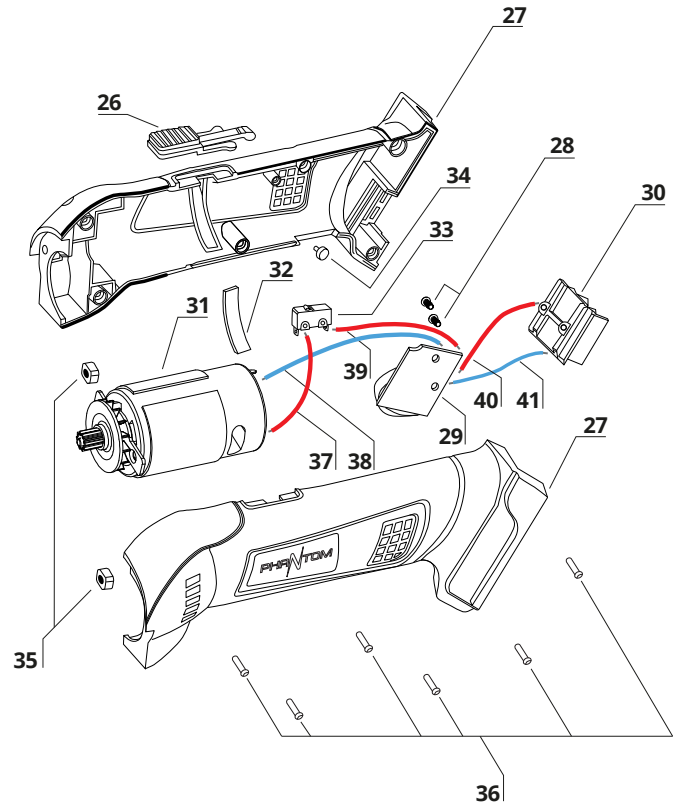

BATTERY NOT
INCLUDED

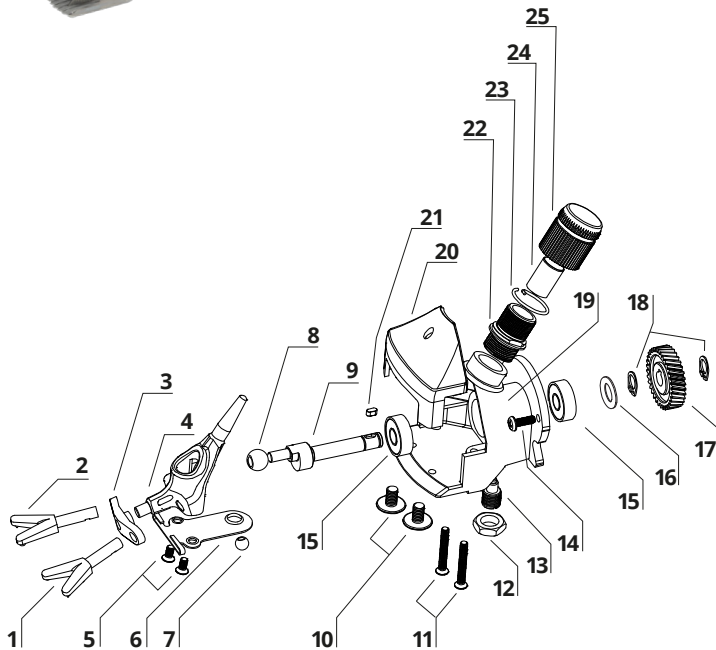

NO.	PART NO.	DESCRIPTION	QTY
1	H15-411	Left Hand Fork	x1
2	H15-412	Right Hand Fork	x1
3	H15-413	Gauge Plate	x1
4	H15-414	Fork Detail	x1
5	H12-028	Tension Link Spring Screw	x2
6	H15-417	Tension Link Spring	x1
7	H15-418	Tension Link Spring Bush	x1
8	H15-419	Crank Roller	x1
9	H15-420	Crank Spindle	x1
10	H15-421	Comb Screw	x2
11	H15-422	Housing Cover Screw	x2
12	H15-423	Fulcrum Post Nut	x1
13	H15-424	Fulcrum Post	x1
14	H15-425	Head Retaining Screw	x2
15	H12-003	608 ZZ Bearing	x2
16	H15-426	Crank Spacer	x1
17	H15-427	Drive Gear	x1
18	H15-428	Crank Spindle Circlip	x2
19	H15-311	Bare Head	x1
20	H15-430	Housing Cover	x1
21	H15-431	Key	x1

NO.	PART NO.	DESCRIPTION	QTY
22	H15-432	Lid Bush	x1
23	H12-009	Tension Retaining Ring	x1
24	H15-434	Sliding Sleeve	x1
25	H15-435	Tension Nut	x1
26	H15-312	Switch Actuator	x1
27	H15-313	Casing (Pair)	x1
28	H15-314	PCB Screw	x2
29	H15-315	PCB	x1
30	H15-316	Battery Connection Plate	x1
31	H15-317	Motor	x1
32	H15-444	Motor Pad	x1
33	H15-448	Switch	x1
34	H15-440	Switch Locator	x1
35	H15-114	Head Retaining Nut	x2
36	H15-318	Casing Screw	x6
37	H15-319	Motor to Switch Wire (red)	x1
38	H15-320	Motor to PCB Wire (blue)	x1
39	H15-321	Switch to PCB Wire (red)	x1
40	H15-322	PCB to Battery Connection Plate Wire (red)	x1
41	H15-323	PCB to Battery Connection Plate Wire (blue)	x1