


TECHNICAL DRAWING

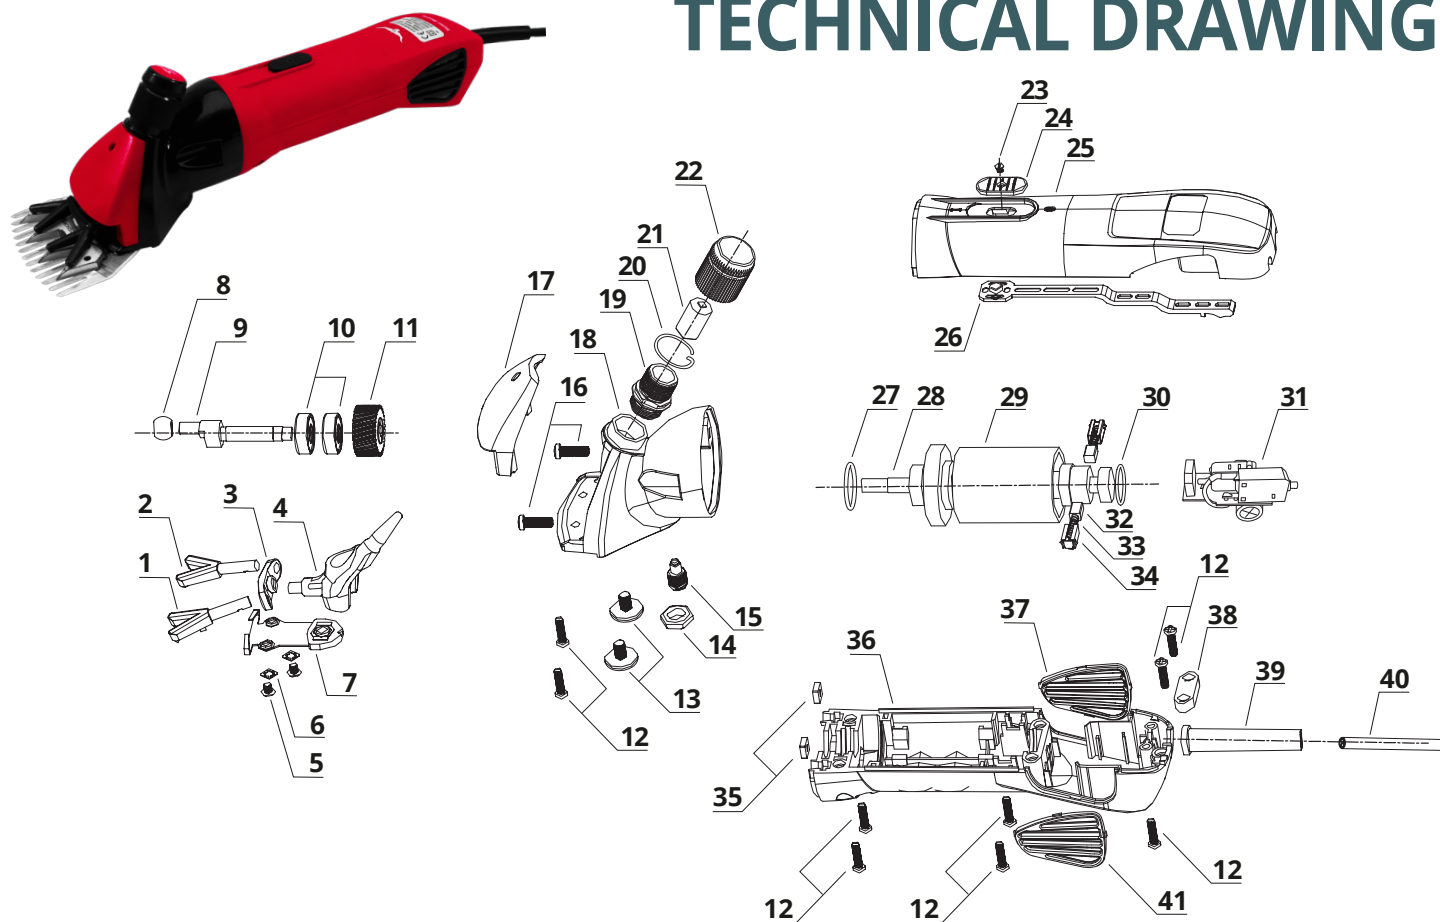

NO.	PART NO.	DESCRIPTION	QTY
1	H12-024	Left Hand Fork	x1
2	H12-023	Right Hand Fork	x1
3	H12-025	Gauge Plate	x1
4	H12-026	Fork Detail	x1
5	H12-028	Tension Link Spring Screw	x2
6	H12-029	Tension Link Spring Washer	x2
7	H12-027	Tension Link Spring	x1
8	H12-001	Crank Roller	x1
9	H12-002	Crank Spindle	x1
10	H12-003	608ZZ Bearing	x2
11	H12-004	Drive Gear	x1
12	H12-030	Screws	x9
13	H12-031	Comb Screws	x2
14	H12-032	Fulcrum Post Nut	x1
15	H12-033	Fulcrum Post	x1
16	H12-006	Head Retaining Screws	x2
17	H12-005	Housing Cover	x1
18	H12-007	Bare Head	x1
19	H12-008	Lid Bush	x1
20	H12-009	Tension Retaining Ring	x1
21	H12-010	Sliding Sleeve	x1

NO.	PART NO.	DESCRIPTION	QTY
22	H12-011	Tension Nut	x1
23	H12-012	Thumb Plate Screw	x1
24	H12-013	Thumb Plate	x1
25	H12-014	Casing Top Half	x1
26	H12-015	Switch Actuator	x1
27	H12-016	O-Ring (front)	x1
28	H12-017	Rotor	x1
29	H12-018	Magnet Housing	x1
30	H12-051	O-Ring (rear)	x1
31	H12-019	Circuit Board	x1
32	H12-020	Carbon Brush	x2
33	H12-021	Carbon Brush Spring	x2
34	H12-022	Brush Holder	x2
35	H12-034	Head Retaining Nut	x2
36	H12-035	Casing Bottom Half	x1
37	H12-036	Air Filter Right	x1
38	H12-038	Cable Grip	x1
39	H12-039	Cable Support	x1
40a	H12-040	Electric Flex - UK Plug	x1
40b	H12-041	Electric Flex - EU Plug	x1
41	H12-042	Air Filter Left	x1